


FAVORITE POSITION

When making changes to the favorite's position on one shade, the other shades on that channel need to be temporarily unlinked from the remote. See UNLINK A SHADE.

SETTING A FAVORITE POSITION

1. Use the RAIL SELECTOR button to choose rail no.2.
2. Use the UP or DOWN button to position the bottom rail at the desired "favorite" position. Press STOP
3. Use the RAIL SELECTOR button to choose rail no.1.
4. Use the UP or DOWN buttons to position the middle rail at the desired "favorite" position. Press STOP.
3. Use the RAIL SELECTOR button to choose rail no.3 in the display.
4. Hold the LIMIT button, quickly press and hold the UP button. Release both buttons when the shade beeps.
5. When holding the LIMIT button, quickly press and hold the UP button. Release both buttons when the shade beeps.
6. When complete, relink "turned off" shades by following the steps on LINK REMOTE.

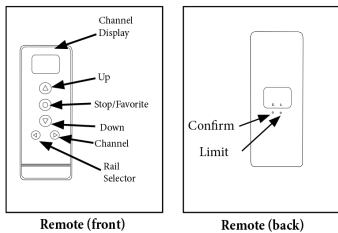

USING A FAVORITE POSITION

1. Use the RAIL SELECTOR button to choose no.3 in the display.
2. Press the STOP/FAVORITE button to bring the shade to the "favorite" position. Both rails will move the shade "favorite" position. Make sure the shade has been stopped for at least 3 seconds before pressing the STOP/FAVORITE button.

ADVANCED PROGRAMMING

REPLACE ORIGINAL REMOTE, ADD ADDITIONAL REMOTE OR ADD SHADE TO AN ADDITIONAL CHANNEL

1. Select the channel that you want to program using the CHANNEL selector button.
2. Activate the Top Down/Bottom Up function for the channel by pressing the RAIL SELECTOR and DOWN buttons at the same time until a rail selector # shows up on the left side of the screen.
3. Use the RAIL SELECTOR button to choose rail no.1.
4. Press the SETTING button on the motor until the motor starts to beep. Release the button immediately after the beeps start. The motor will make 4 fast beeps followed by 5 long beeps. Press the CONFIRM button on the remote anytime during the series of long beeps. It must be pressed before the last long beep. The motor will respond with 3 fast beeps confirming that the shade has been linked.
5. Repeat this step for all shades that will be controlled by the same channel. It is recommended to link only one shade per channel. You can not mix top down / bottom up shade and bottom only shades on the same remote.
6. Repeat steps 1-5 to program the rest of the channels.

REMOVE A SHADE FROM A REMOTE OR CHANNEL AND LINK IT TO A DIFFERENT REMOTE OR CHANNEL

1. Select the channel that you want to unlink using the CHANNEL selector button.
2. Press and hold the CONFIRM button. The shade(s) will give a series of fast beeps (4 beeps/pause/4 beeps/pause/8 beeps).

Link the motor to the new remote or channel

1. Follow the steps for replacing the remote above.

TROUBLESHOOTING

THE MOTOR DOES NOT WORK OR RUNS SLOW.

SOLUTION:

Recharge motor.

THE MOTOR CONTINUES TO RUN IN ONE DIRECTION.

SOLUTION:

The limit setting was unsuccessful and needs to be reset.

THE INDICATOR LIGHT ON THE REMOTE DOES NOT SHINE OR THE REMOTE-CONTROLLING RANGE BECOMES SHORTER


SOLUTION:

Replace the battery in the remote (CR2430)

CHARGING THE MOTOR BATTERY

When the shade begins to operate slower than normal it is time to charge the battery. Plug the 8.4v charger unto the port on the motor. Plug the charger into an electrical outlet. A red light on the charger indicates that the battery is charging. To fully charge the batteries, allow the batteries to charge for at least 1 hour after the light on the charger turns green. A typical charge cycle can take between 4-6 hours.

DO NOT leave the charger plugged in for longer than 24 hours.

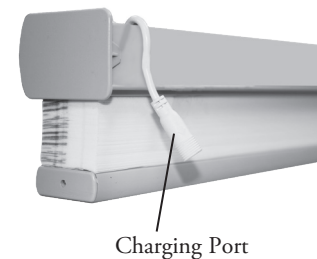



SIMPLICITY

Rechargeable Motorization
TOP DOWN / BOTTOM UP

PROGRAMMING & OPERATING INSTRUCTIONS

BEFORE YOU BEGIN

Before you begin – connect the motor and the rechargeable battery cables. Shades exceeding 36" wide will have a battery located inside the headrail. Shades under 36" wide will have an external battery. Battery will have a full charge upon arrival.

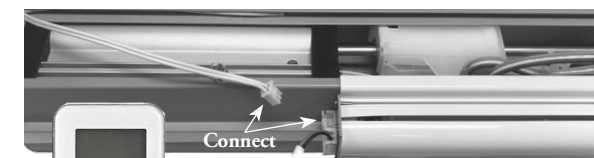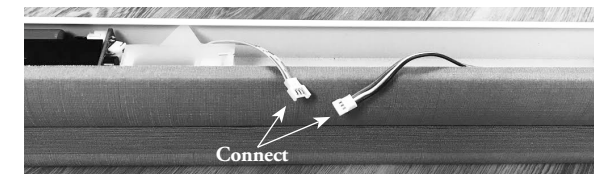

External Battery for shades under 36" wide



QUESTIONS?

Call Vista's hotline for quick assistance.
800-726-3380



FEATURES

SIMPLICITY Rechargeable Motorization — Blinds can be powered by a discrete and easy to use custom rechargeable battery pack. Simplicity Blinds can be operated for up to one full year on a single charge. And, you can recharge the batteries up to 500 times!

SAFETY INSTRUCTIONS

WARNING: Important safety instructions to be read before installation.

Incorrect installation can lead to serious injury and will void manufacturer's liability and warranty.

It is important for the safety of persons to follow the enclosed instructions. Save these instructions for future reference.

CAUTION

- Do not expose to water, moisture, humid and damp environments or extreme temperatures.
- Do not allow children to play with this device.
- Use or modification outside the scope of this instruction manual will void warranty.
- Installation and programming to be performed by a suitably qualified installer.
- Frequently inspect for improper operation. Do not use if repair or adjustment is necessary.
- Keep clear when in operation.
- Replace battery with correctly specified type.

UNLINK A SHADE

To UNLINK a shade, press and hold the CONFIRM button. The shade will give a series of fast beeps (4 beeps/pause/4 beeps/pause/8 beeps)

When the series of beeps is complete release the CONFIRM button.

All shades previously linked to selected channel will now be unlinked.



SHADE OPERATION

Select the desired channel with the CHANNEL button.

Use the RAIL SELECTOR to choose which rail you want to move. When 1 is displayed, the middle rail will operate. When a 2 is displayed the bottom rail will operate. When a 3 is displayed both rails will operate at the same time. 3 can also be used for a "favorite" position.

Press the UP and DOWN buttons to raise or lower the rail(s) selected.



Press the STOP button to stop the shade anywhere along the travel.

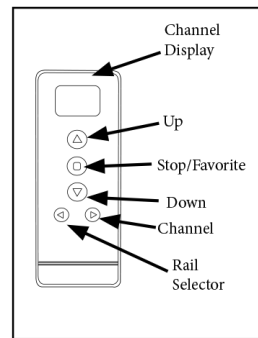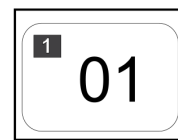


Remote (front)

LINK REMOTE

1. Select the channel that you want to link the shade to, using the CHANNEL selector.
2. Activate the Top Down/Bottom Up function for the channel by pressing the RAIL SELECTOR and DOWN buttons at the same time until a rail selector # shows up on the left side of the screen.
3. Use the RAIL SELECTOR button to choose rail "1".
4. Press the SETTING button on the right motor until the motor starts to beep. Release the button immediately after the beep starts. The motor will make 4 fast beeps followed by 5 long beeps. Press the CONFIRM button on the remote anytime during the series of long beeps. It must be pressed before the last long beep. The motor will respond with 3 fast beeps confirming that the shade has been linked.
5. Repeat step 4 for all shades controlled by the same channel. (not recommended to put more than 1 shade on a channel)
6. Repeat steps 1-5 to link remaining shades to the rest of the channel.

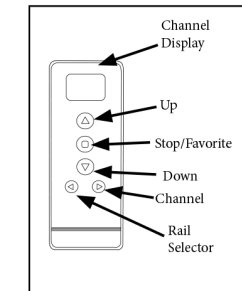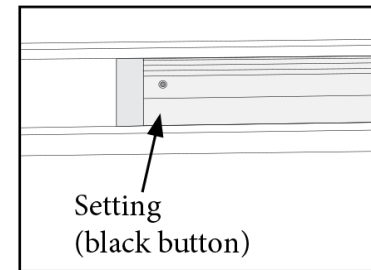

Remote (front)

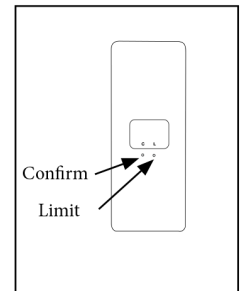

Remote (back)

ADJUSTING LIMITS


If using a timer remote, tap the clock button until you see "Manual" in the display.

The upper and lower limits have been set at the factory.

NOTE: When adjusting one shade, the other shades on that channel need to be temporarily unlinked from the remote.

Follow the limit setting instructions and then relink "turned off" shades by following the steps in LINK REMOTE.

1. Use the RAIL SELECTOR button to choose rail no.1.
2. Hold the LIMIT button until the shade beeps 4 times.
3. Use the UP button to raise the middle rail to the head rail and then press STOP. The shade will not move in short steps for fine adjustment.
4. Use the RAIL SELECTOR button to choose rail no.2.

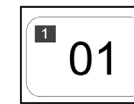

5. Use the UP button to raise the bottom rail near the top. Press STOP. The shade will now move in short steps for fine adjustment. Use the UP button to raise the rail until the fabric is compressed.

6. Hold the CONFIRM button until the shade beeps once. **This sets the upper limit.**

7. Use the DOWN button to lower the bottom rail near the desired lower limit. Press STOP.

8. Use the UP or DOWN buttons to accurately adjust the position of the bottom rail.

9. Hold the CONFIRM button until the shade beeps once. **This sets the lower limit.**