


Bay Window

Measure Instructions

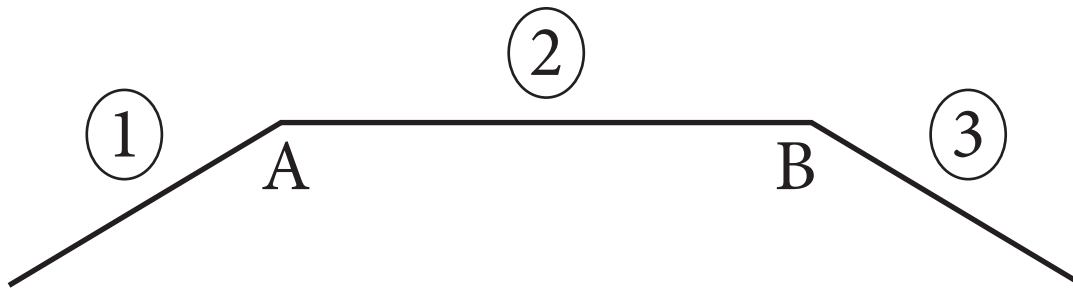

Measure each leg:

Example:

LEG #1 = 36"

LEG #2 = 52"

LEG #3 = 36 1/8"

Determine the degree of angle in the 2 corners. Use of a protractor helps.

Example:

ANGLE #A (135°)

ANGLE #B (135°)



Make a template:

1. On a large sheet of paper draw your angles.
 2. Take the hinged multi link connector and place on the drawing in the angles.
 3. Measure from line "x" to end of connector on each side.
- On the left connector deduct that # from Leg 1 and Leg 2
 - On the right connector deduct that # form Leg 2 and Leg 3
- These become your order width.**

