


OPERATING INSTRUCTIONS:

WAND CONTROL

A single wand is attached to the lead carrier. Operate the blind by twisting the wand to rotate the vanes open and closed. Pull the wand across the headrail/track to traverse the vanes.

MOUNTING BRACKETS: Inside Mount/Ceiling Mount

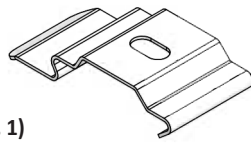


(Fig. 1)

Mark the bracket location before drilling. Use 1 screw for the inside mount brackets (Fig. 1) ensuring that the brackets are installed parallel to each other. The brackets should be located to allow for the depth of the fabric louvers to tilt. Minimum 3 3/4" is required.

The brackets should be located approximately 1 1/2" from each end of the track with additional brackets spaced evenly between these. Always use all brackets supplied. Brackets should be mounted to the ceiling or top of the window frame.

MOUNTING BRACKETS: Outside Mount

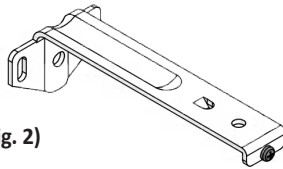

(Fig. 2)

Mark the bracket location before drilling. Use 2 screws for the outside mount brackets (Fig. 2) ensuring that the brackets are level.


The brackets should be located approximately 1 1/2" from each end with additional brackets spaced evenly between these.

Always use all brackets supplied. Brackets should be mounted to the wall or front of the window frame.

BRACKETS REQUIRED

| Blind Width | # of Brackets |
|------------------|---------------|
| Up to 35" | 2 |
| 35 1/8" to 63" | 3 |
| 63 1/8" to 90" | 4 |
| 90 1/8" to 118" | 5 |
| 118 1/8" to 145" | 6 |
| 145 1/8" to 173" | 7 |
| 173 1/8" to 192" | 8 |

SPACER BLOCK: OUTSIDE MOUNT

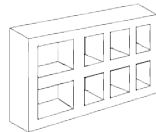

(Fig. 3)

Spacer blocks (Fig. 3) are used to provide extra depth clearance from obstructions. Each spacer provides additional 1/2" depth. Outside Mount ONLY.

INSTALL THE HEADRAIL: INSIDE MOUNT




(Fig. 4)

INSIDE MOUNT

Snap the headrail into place by inserting the edge of the headrail into the front of the mounting clip and rotating the back until the headrail snaps firmly into place (Fig. 4).



INSTALL THE HEADRAIL: OUTSIDE MOUNT

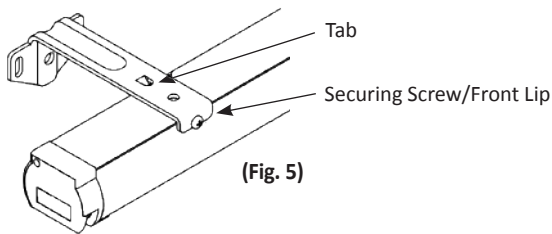

OUTSIDE MOUNT

Position the headrail between the tab on the bracket and front lip, tighten set screw once in place (Fig. 5).





FABRIC VANES

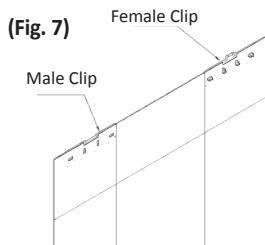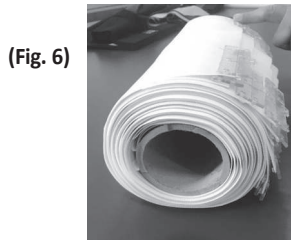



The fabric vanes are packaged on a roll (Fig. 6).

The first vane will have both male and female hanger pieces attached to the left and the last will have both hanger pieces attached to the right half of the fabric. All the additional vanes will have one male and one female on each side (Fig. 7).

INSTALL THE FABRIC VANES

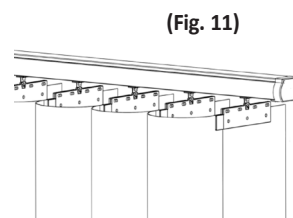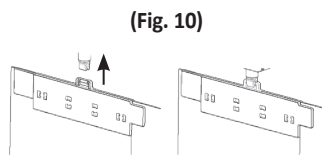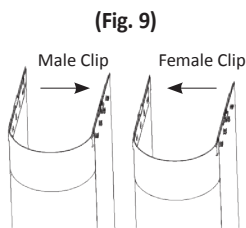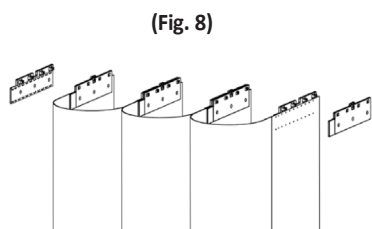


1. Turn the carriers so that the slots are at 90 degrees to the track (Fig. 8).
2. Insert the combined hanger of the first vane into the first carrier.
3. Before inserting the right side, clasp the male hanger to the female hanger on the next vane (Fig. 9).
4. Once snapped together insert the hanger into the next carrier (Fig. 10).
5. Repeat this process until all the vanes are connected and attached to the track (Fig. 11).

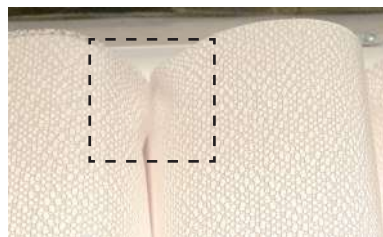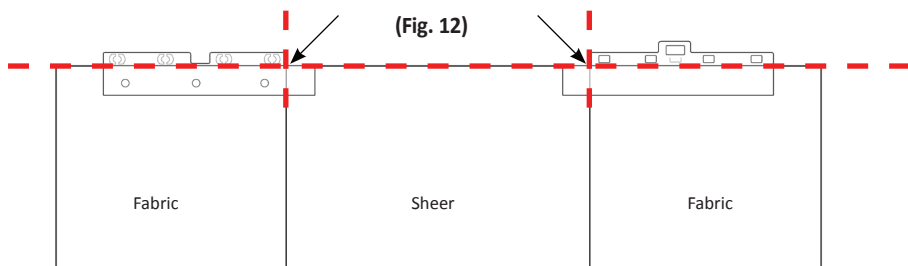

Fabric hangers are attached at the factory with a light holding adhesive to make installation easier. Should the fabric hanger come loose in shipping simply reattach the fabric (Fig. 12), before snapping together. Make sure the hanger is applied to the fabric, straight and even, to prevent puckers in the fabric header (Fig. 13). The adhesive doesn't serve any purpose once installation is complete; it simply helps hold the hanger in place during installation.

CARE AND CLEANING

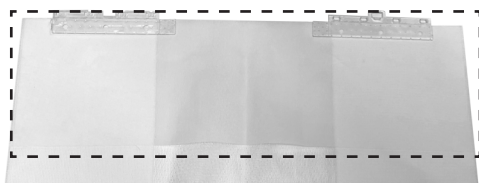

Illusion fabric may be hand washed in lukewarm water with a small amount of mild detergent. **DO NOT** fully immerse the top header fabric (Fig. 14) in water and **DO NOT** wet the plastic hangers. Wash dark colors separately from light colors. Drip dry by hanging vertically on a drying line. Any initial wrinkling of fabric should hang out within a few days. Cool iron or steam, if necessary.