



MAGNETIC HOLD DOWNS INSTALLATION INSTRUCTIONS

Follow these steps to attach the magnetic hold downs to your square hembar.

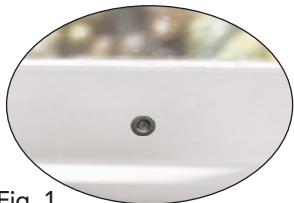


Fig. 1

1. Decide where each magnet will be placed, and mark center hole location on the window frame or desired location.

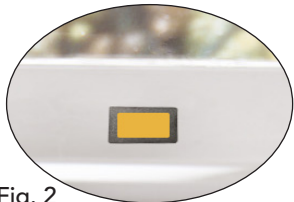


Fig. 2

2. Secure the magnets into place using the provided screws (Fig.1).
WARNING: DO NOT overtighten screw. Overtightning may break the magnet.
3. To ensure proper strike plate placement, attach each plate to a magnet (Fig. 2).

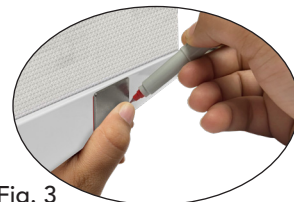


Fig. 3

4. Lower the shade, align the bottom hem and mark the location of the strike plate on the back of the hem bar where it will be adhered to (Fig. 3).
5. Remove the strike plate from the magnet, peel the backing off the double-sided tape, and press plate onto the marked location .

Your magnetic hold downs have now been installed!