



Sides and Sill Privacy Strip


Installation Instructions

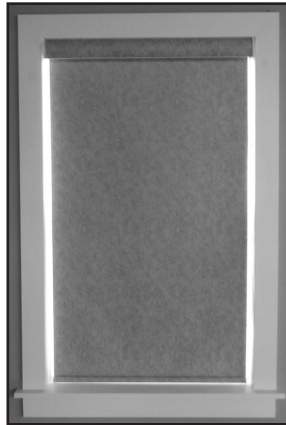


1. Lower the blind to rest on the window sill.

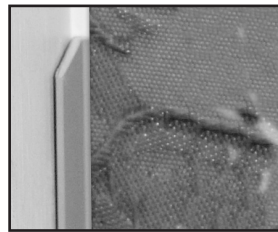

2. Before removing the backing off from the adhesive side of your privacy strip, determine if you will be mounting the product in front or behind the material. We recommended mounting the light block behind the material. The aesthetic of your window may be compromised if installed in front.

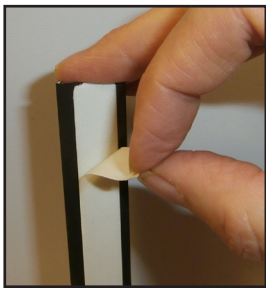

3. Once mounting location is determined, remove the backing off the adhesive on the privacy strip and attach to the window frame.

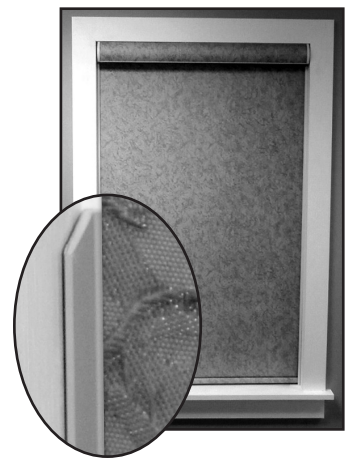

4. Installation Complete!

